


## CROSS-SECTIONAL DRAWING WITH PARTS LIST L2NG 30-186/... AHOKIO-G

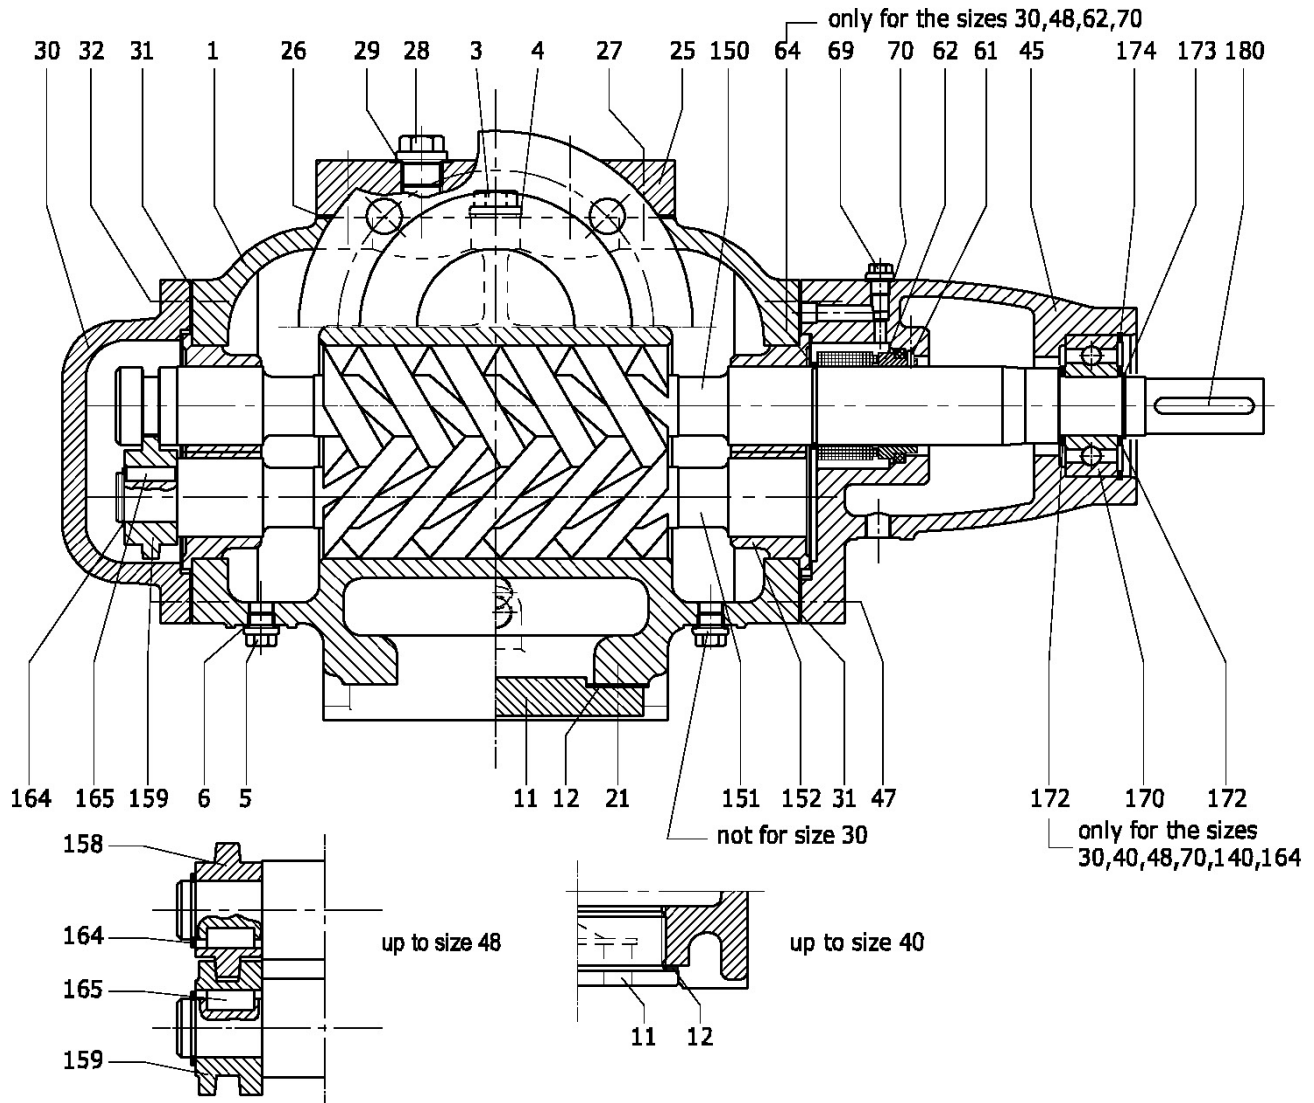

1	Pump Casing	28	Plug	150	Power Rotor
3	Plug	29	Seal Ring	151	Idler Roter
4	Seal Ring	30	Cover-Driven Side	+ 152	Bushing
5	Plug	+ 31	Gasket	158	Shaft Collar-Power Rotor
6	Seal Ring	32	Mounting Screw	159	Shaft Collar-Idler Rotor
11	Plug or Heating Foot Cover	45	Cover-Drive Side	+ 164	Snap Ring
12	Seal Ring or Gasket	47	Mounting Screw	+ 165	Key
21	Mounting Screw	61	Pin	+ 170	Ball Bearing
25	Valve Blank Plate	+ 62	Mechanical Seal	+ 172	Back Ring
26	Gasket	64	Snap Ring	+ 173	Snap Ring
27	Mounting Screw	69	Plug	+ 174	Snap Ring
		70	Seal Ring	+ 180	Key

+ Recommended spare parts